
YYASKAWA

Σ -V Series Command Option Module Installation Guide

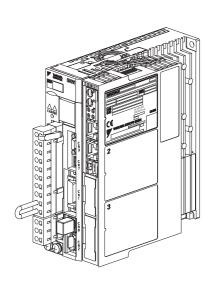

MANUAL NO. YEG TOEP C720829 01B

This installation guide explains how to mount the Σ -V Series command option module onto the $\dot{\Sigma}\text{-V}$ Series SERVOPACK. Read this installation guide thoroughly as well as the safety precautions (YEG TOEP C720829 00) included with the product.

General Precautions

- •The drawings presented in these instructions are sometimes shown without covers or protective guards. Always replace the equipment's cover or protective guard as specified first, and then operate the products in accordance with the user's manual.
- The drawings presented in these instructions are typical examples and may not match the product you received.
- •These instructions are subject to change due to product improvement, specification modification, and instructions improvement. When these instructions are revised, the instructions code is updated and the new instructions are published as a next edition.
- If the instructions must be ordered due to loss or damage, inform vour nearest Yaskawa representative or one of the offices listed on the back of these instructions.
- Yaskawa will not take responsibility for the results of unauthorized modifications of this product. Yaskawa shall not be liable for any damages or troubles resulting from unauthorized modification.

Safety Information

- The following conventions are used to indicate precautions in these
- Failure to heed these precautions can result in serious or possibly even fatal injury or damage to the products or to related equipment and systems.

WARNING Indicates precautions that, if not heeded, could possibly result in loss of life or serious injury.




CAUTION Indicates precautions that, if not heeded, could result in relatively serious or minor injury, damage to the product, or faulty operation.


> In some situations, the precautions indicated could have serious consequences if not heeded.

APPLICABLE SERVOPACKS IN THE Σ -V SERIES

•Command Option Attachable Type

ITEMS REQUIRED FOR INSTALLATION

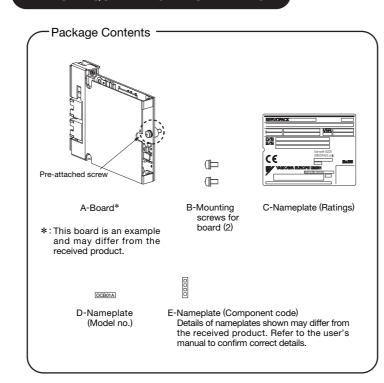

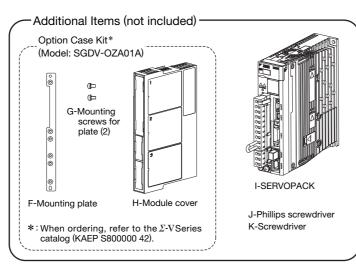

INSTALLATION CONDITIONS

Install the module in the following environment.

- Cover the working area with a conductive or antistatic mat.
- This mat must be safely grounded with a resistor (1 M $\Omega\pm20\%$).
- \bullet The surrounding air temperature must be between 0 and 55 °C.
- Ambient humidity must be 90 °C RH or less (with no condensation).
- No extreme changes in temperature that can cause condensation
- Free from corrosive or flammable gases
- Free from dust, salts, or iron dust
- Not subject to water, oil, or chemicals
- No vibration and/or shock directly transmitted to the product

SAFETY PRECAUTIONS

■ Before starting

∴ CAUTION

- Always wear an antistatic wrist strap that is safely grounded.
- Touch a safely grounded object to discharge any static electricity from your body.

■ Installation


CAUTION

- Install in the specified environment. Failure to observe this caution may result in malfunction.
- Disconnect all cables from the SERVOPACK before installing the board. Failure to observe this caution may result in malfunction.
- Do not apply any impact to the board. Failure to observe this caution may result in malfunction.
- Protect the board from moisture.
- Failure to observe this caution may result in malfunction.
- Do not touch the connector or electronic components on the board. Hold the board along its edges when installing. Failure to observe this caution may result in malfunction
- . Do not place any object on the board. Failure to observe this caution may result in malfunction.
- Avoid direct contact with any object that has not had antistatic treatment Failure to observe this caution may result in malfunction.
- Make sure that your clothing is not in contact with the board. Failure to observe this caution may result in malfunction.
- Do not tighten the screws with excessive torque The recommended tightening torque is 0.14 \dot{N} m $\pm 10\%$. Tightening screws with excessive torque may damage screw threads and the spacer, resulting in deformation of the board.

INSTALLATION PROCEDURE


Preparing the SERVOPACK

1.Fit the mounting plate (F) into the recess on the SERVOPACK, and fix the plate with the mounting screws (G). (Tightening torque: 0.14 Nm) Back F-Mounting plate G-Mounting screws I-SERVOPACK

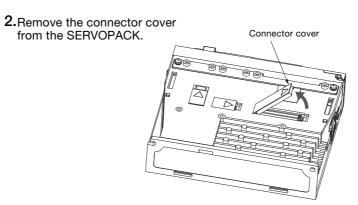

Installing the Board

3. Hold both ends of the board (A) as shown in the illustration, and firmly insert the board connector into the connector port on the SERVOPACK. Insert the board connector firmly into the connector port.

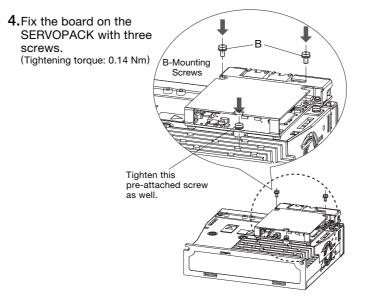

Preparing the Module Cover


5.Remove one of the front covers (shown in the illustration) from the module cover (H) with a screwdriver (K)

 Do not remove the other front covers. Front cover Remove only this cover.

H-Module cover

6. Affix three nameplates (C, D, E) to the positions specified in illustration

user's manual

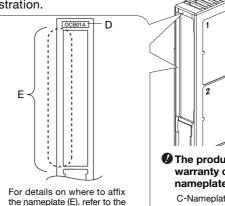

The product is under warranty only when the nameplate (C) is attached.


C-Nameplate (Ratings) D-Nameplate (Model no.) E-Nameplate (Component code

to remove the

front cover.

Mounting the Module Cover

7. Align the front end of the module cover (H) with the front panel of the SERVOPACK as shown in the illustration, and place the module cover so that you can view the installed board from the opening (where the front cover is removed) on the module cover.

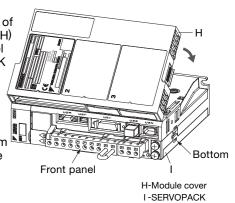

8. Fix the module cover to the SERVOPACK Retention clip angle by pushing in the end protrusion retention clips on the left and right side of Push the clips in the the module cover, while directing their by the arrow so the clip will go into the SERVOPACK. angled end protrusions to enter the SERVOPACK. Retention clip Retention clip

After Installing

Conduct a trial operation after the command option module has been properly installed on the SERVOPACK. For trial operation details, refer to $\Sigma\text{-V}\operatorname{Series}$ User's Manual: Setup Rotational motor/Linear motor (SIEP S800000 43/44).

If You Need to Send Us the Option Module for Service

Always leave the option module attached to the SERVOPACK when sending the option module to YASKAWA for service.

$\Sigma ext{-V}$ Series Command Option Module Installation Guide

European headquarters

YASKAWA EUROPE GmbH

Hauptstraße 185, 65760 Eschborn, Germany Phone: +49 (0) 6196-569-300 Fax: +49 (0) 6196-569-398

YASKAWA ENGINEERING EUROPE GmbH

Phone: +49 (0) 6196-569-520 Fax: +49 (0) 6196-888-598

Manufacturing facility

YASKAWA ELECTRIC UK LTD.

auld, G68 9LF. United Kingdom Phone: +44 (0) 1236-735000 Fax: +44 (0) 1236-458182

YASKAWA YASKAWA EUROPE GmbH